

VIVOSUN

WARNING

Please make sure all screws and straps are tightened before folding and unfolding.

Max loading: 180lbs

WASHING INSTRUCTIONS

Surface wash with a damp cloth only. Spot clean. Do not immerse in water.

Dry immediately.


GENERAL GUIDELINES

1. To open, remove carry bag and undo velcro storage straps around sides of wagon.
2. Fold the wagon open by pushing both sides in opposite directions and ensuring the floor of the interior is flat.
3. Place floor mat inside wagon to cover frame.
4. Extend wagon pull handle to desired length and enjoy!

To fold wagon back into carrying bag, reverse the above instructions.

Made in China

SET-UP THE WAGON

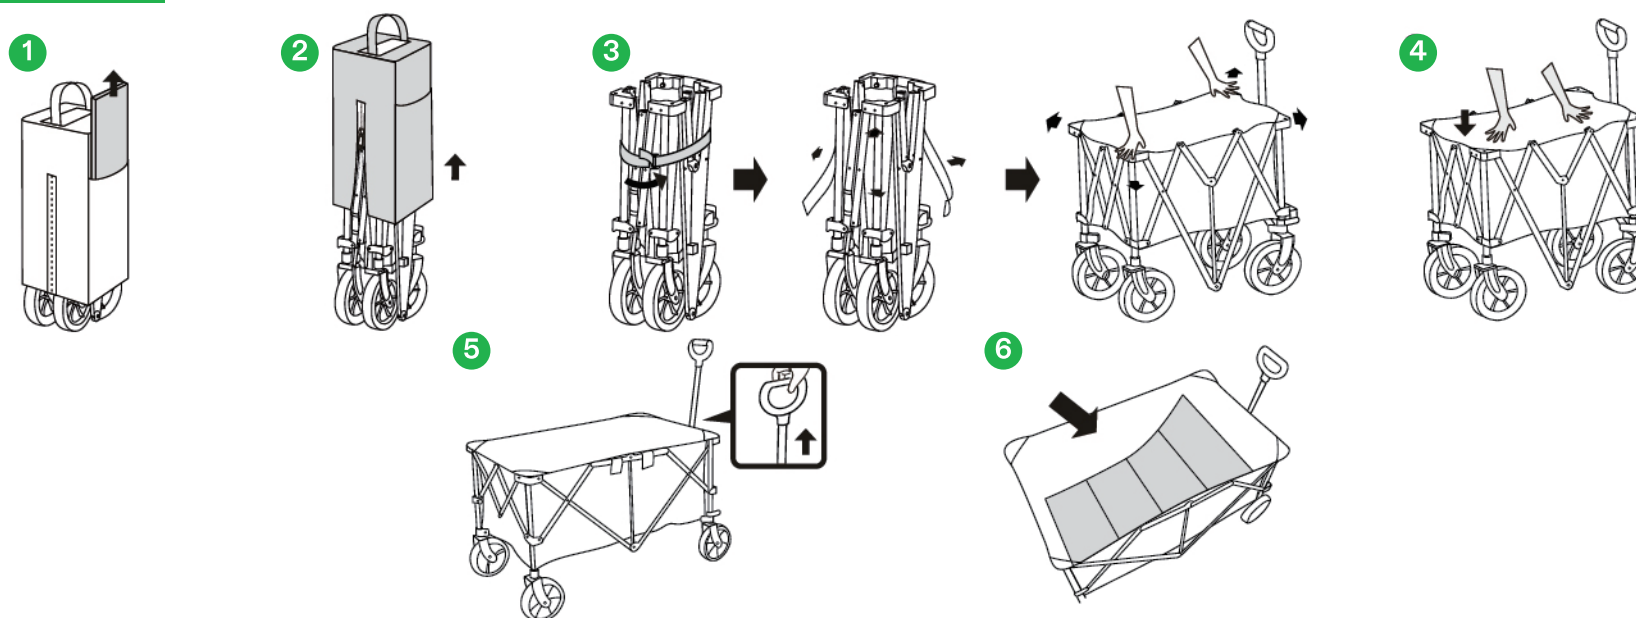

FOLDING THE WAGON

