




Designed by **VIVOSUN** in California.
Made in China

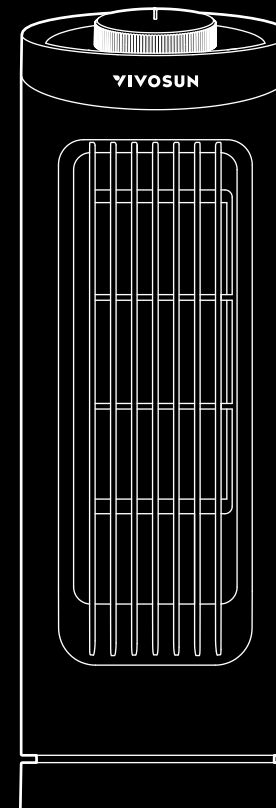

13" TOWER FAN

USER MANUAL

Love what you grow™

Welcome to **VIVOSUN**

Thank you for choosing VIVOSUN. We are committed to product quality and friendly customer service. If you have any questions or suggestions, please don't hesitate to contact us.

GENERAL SAFETY WARNINGS

1. Read all instructions carefully before use.
2. Connect to a power supply of 120V~ 60 Hz only.
3. Keep the appliance and cable away from heat sources, sharp objects or anything that could cause damage.
4. Do not place the cord under carpets. Do not cover the cord with small clothes, shirts or other similar things. Keep the cord away from traffic areas to avoid tripping hazards.
5. Do not operate the appliance if the cable or plug are damaged.
6. If the cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid hazards.
7. For indoor use only!
8. Do not cover the machine during operation.
9. Always operate on a stable, flat, horizontal surface.
10. Ensure the appliance is switched OFF before connecting to the power supply.
11. Always ensure that your hands are dry before operating or adjusting any switches on the product or touching the plug and power connections.
12. Do not leave this appliance unattended when it's in use. Turn off and unplug the appliance when you leave the room for an extended period of time.
13. Turn off and unplug this apparatus when not in use and before cleaning or performing maintenance on the device.
14. To disconnect the appliance, switch it "OFF" and unplug the power cable. Do not pull on the cord to unplug – unplug the device with the plug itself.
15. This appliance is intended for use by children aged 8 years old and older and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning how to use the appliance in a safe way and have understood the hazards involved.
16. Do not allow children to play with the appliance. Cleaning and maintenance shall not be made by children without supervision.
17. After assembly, it is strictly forbidden to remove the protective guards during maintenance or cleaning.

PRECAUTIONS FOR USE

1. Use the fan only as described in this manual.
2. Do not connect the fan to the power supply before completing the assembly.
3. Do not insert your fingers into the openings of the guard – this can be dangerous.
4. Never use the fan without the protective cover. Do not use the fan if the propeller is damaged or cracked.
5. Do not leave hair, tissue, tablecloth, fabric, clothing, or curtains near the openings of the fan as they could be sucked into the fan and caught in the internal moving parts, potentially causing injury or damage.
6. Do not use the fan in wet or damp spaces such as bathrooms.
7. Do not operate the fan when it's not in an upright position.
8. Make sure the power cord is completely unraveled before use.
9. Always unplug the fan in the places where gasoline, paint or other flammable liquids are stored or used. Do not use this device in spaces with volatile chemicals or aerosols.

TECHNICAL DATA

Model	TF-2202
SKU	VSV-TF13/VSV-TF13-W
Main Supply	120V
Frequency	60Hz
Output	30W
Protection Class	II
Speed	3
Timer	No
Fan Sound Power Level (LWA)	52dB(A)
Maximum Air Velocity (c)	7 m/s

OPERATION

SPEED SELECTION:

Connect the plug to the power socket. There are two types of controls as shown below:

1. 3-speed control (right side)



Turn off



Low speed



Medium speed



High speed

2. 3-speed control with oscillation (with "Swing" icon on the left side). The fan can oscillate up to 70 degrees.



Turn off



Low speed




Medium speed



High speed

Operate the switch manually by turning it to the desired speed as shown below.

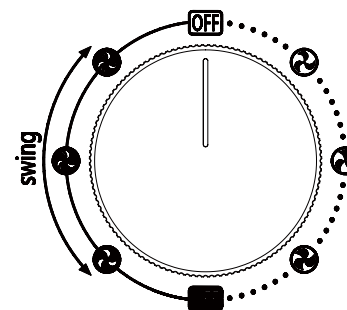

CLEANING AND STORAGE

- Use a soft cloth to gently wipe the fan clean.
- DO NOT immerse the fan in water and never allow water to drip or enter into the motor housing.
- For storage, clean the fan carefully as instructed and store your fan in a cool, dry place.

DESCRIPTION OF SYMBOLS



Class II symbol: This appliance is designed with double insulation. It is not necessary to connect it to an earth connection.



Crossed-out wheeled bin symbol: The item should be disposed of separately from household waste and be handed in for recycling in accordance with local environmental regulations for waste disposal. By separating a marked item from your household waste, you will help minimize the potential negative impact on human health and the environment.