
Electric Sprayer 2L

User Manual



VIVOSUN

Welcome to **VIVOSUN**

At Vivosun, quality craftsmanship and innovation are at the core of every product we create. Should you require further support or wish to share any suggestions, please don't hesitate to contact us.

**Love
Growing
Green**

Content

Warning	2
Specification	3
Product Overview	4
Operation	5
Troubleshooting	6
Warranty	7



Be sure to read and familiarize yourself with the manual before operating the device.
Keep the manual for future reference!


Warning

1. Please read this manual carefully before operating the sprayer and follow all instructions and safety guidelines.
2. The temperature of the liquid used in this sprayer must not exceed 40°C.
3. Never aim the sprayer at humans or animals.
4. Do not use prohibited chemicals such as strong acids, strong bases, flammable or highly volatile substances, high-viscosity solutions, or any chemicals that generate heat, pressure, or gases.
5. Keep the sprayer away from falling, overturning, vibrations, extreme temperatures, direct sunlight, and impacts during use to avoid damage or leakage.
6. Never immerse the sprayer in water or expose it to extreme heat.

Specifications

Model	VSG-ESPRAY-2L
Type	Electric Sprayer
Maximum Capacity	2L
Material	HDPE+ABS
Charging Time	3.5 hours
Maximum Working Time	3 hours
Size	21*16.5*19 cm
Net Weight	420 g

Product Contents

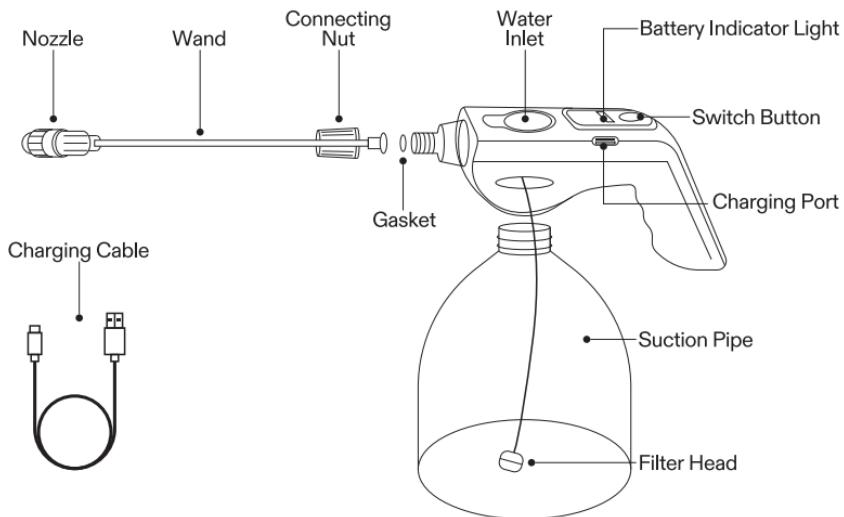

Operation

1. Add the liquid you want to spray into the bottle and securely tighten the handle along the threads.
2. Align the extension wand with the threads on the handle and tighten. Ensure the gasket at the connection is in place (reinstall it if missing before tightening the wand).
3. Turn on the device and adjust the spray pattern by rotating the nozzle at the end of the wand. Turn counterclockwise until fully tightened for a misting effect, or 1-2 turns clockwise for a straight stream. Avoid over-tightening clockwise, as this may loosen the nozzle and cause leaks.
4. Use the black silicone cap on the sprayer head as an additional water inlet, allowing you to add water without removing the entire handle.
5. To charge, connect the USB-C cable to the charging port and check the battery level via the indicator light. After charging, replace the cap to protect against water damage.

Troubleshooting

1. The sprayer is leaking

Possible Causes:

The handle is not securely tightened to the sprayer body

The sprayer wand is not properly tightened to the handle

The nozzle has loosened due to excessive clockwise rotation

2. No water comes out when the sprayer is turned on

The filter in the bottle is clogged and should be removed and rinsed with clean water

The connection between the sprayer wand and the sprayer body is clogged; unscrew and rinse with clean water

The nozzle is clogged; unscrew and rinse with clean water

Warranty

Vivosun provides a one-year warranty against defects on any Electric Sprayer 2L purchased directly from us or through our authorized dealers. This policy serves as our commitment to promptly address any manufacturing defects or premature breakage that may occur during normal use of our products.

Our warranty covers the replacement or refund of purchases that exhibit material defects within one year of the original purchase date. In such events, customers may contact us to initiate the claim process. We will need proof of purchase to verify coverage eligibility.

This policy does not extend to products that have been misused, abused, or purposefully damaged. It also does not cover normal wear and tear or cosmetic defects such as minor scratches.

Customers can rest assured knowing that our products undergo rigorous quality testing procedures. This one-year warranty reflects our confidence in the durability of our products under normal use.



Electric Sprayer 2L

vivosun.com



VIVOSUN