

VIVOSUN



BOWL TRIMMER

USER MANUAL

Love what you grow™

Welcome to **VIVOSUN**

Thank you for choosing VIVOSUN. We are committed to product quality and friendly customer service. If you have any questions or suggestions, please don't hesitate to contact us.

PRODUCTS INCLUDED IN THIS MANUAL:

Product	Model	SKU
Bowl Trimmer 13"	VSS-BT13	E331905
Bowl Trimmer 16"	VSS-BT16	E331903
Bowl Trimmer 19"	VSS-BT19	E331904

CONTENTS

Safety Information	1
Product Contents	2
Key Features	4
Specifications	5
Operation	6
Maintenance	11


SAFETY INFORMATION



Please carefully read the following information before using the product. Failure to follow these safety instructions could lead to serious injury and will release VIVOSUN from any liability, as well as void all product warranties.

1. Please read this manual carefully before assembly, use or maintenance. Use the trimmers in accordance with applicable laws and regulations.
2. This product contains sharp blades and wires. When assembling, using, or maintaining it, ensure you wear appropriate gloves and exercise caution.
3. Do not insert fingers into the screen grid.
4. Only use this product to trim plant materials; do not use it for anything else.
5. Store the blades in a secure location and use a protector on the sharp parts when the product is not in use.
6. Keep this product out of the reach of children.
7. Clean the product using a damp cloth. Wear suitable gloves and exercise caution when cleaning.
8. The manufacturer holds no responsibility for any damage caused to the trimmers or by the trimmers due to improper use or installation.
9. If you identify any defects or damage to the product or its components, discontinue use and contact us. Do not replace any components without proper authorization, as doing so will immediately void the warranty.

PRODUCT CONTENTS

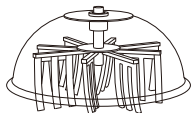


Dome
x1pc



Mesh Screen
x 1pc



Stainless Steel Container
x 1pc

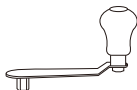


Handle
x1pc



Blade
x 2pcs



 X-blade
x 2pcs



Anti-slip Pad
x1pc




Shears
x 1pc



U-type Scissors
x 1pc


PRODUCT CONTENTS

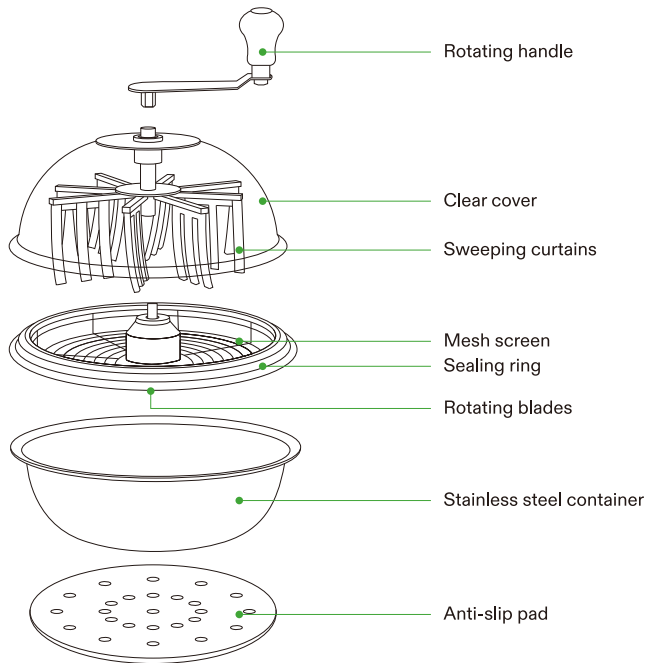

KEY FEATURES

DIFFERENT SIZE

13"-19" bowl trimmer with clear dome and stainless steel container.

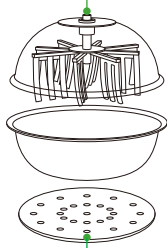


SAFE & CLEAN

Fully sealed dome and anti-slip pad provide safe and clean trimming.

STAINLESS STEEL BLADES

Four-edged sharp blades made of stainless steel provide powerful cutting and long lifetime.

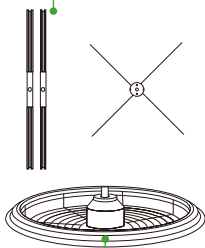


FOOD-GRADE MATERIAL

Product made of food grade materials is safe for your health.

DRY & WET TRIMMING

Three types of blades suitable for dry or wet buds trimming.

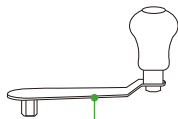

ERGONOMIC DESIGN

Ergonomic design of handle and rotating system makes the trimming easy and smoothy.

SPECIFICATIONS

	VSS-BT13	VSS-BT16	VSS-BT19
Size	φ13.2"x12.6"	φ16"x11.6"	φ19.6"x12.1"
Trimming Method	Manual		
Materials	Stainless steel (blades, container, mesh screen) Food-grade silicone (sweeping curtains, sealing ring)		
Trim Mode	Wet trimming, Dry trimming		
Blades	4.5" Four-edged straight blade (wet trimming) 4.5" Four-edged serrated blade (dry trimming) 4.5" X-blade (dry trimming)		
Screen	Stainless steel, 6mm spacing		

OPERATION


BEFORE TRIMMING

Choose an appropriate blade before trimming. Use the straight blade (pre-installed) for trimming wet buds. Use the serrated blade or X- blade for trimming dry buds. Refer to the following steps to change blades. Please wear appropriate gloves and be cautious when changing or adjusting the blade.

CHANGING BLADES


STEP 1

Unscrew the wing nut and spring washer from the center bolt on the back of the mesh screen.

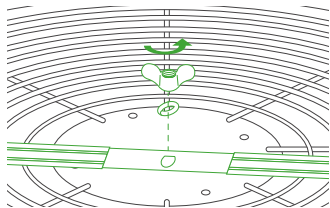

STEP 2

Remove the blade and replace with a new one. It is suggested to use a soft cloth to hold the center part of the blade.


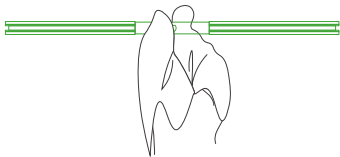


OPERATION

STEP 3



Install the new blade back into the central bolt on the back of the mesh screen with washers and wing nut.

Note: When using the X-blades for dry trimming, do not use the upper and lower gaskets as the serrated blade.

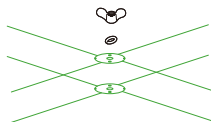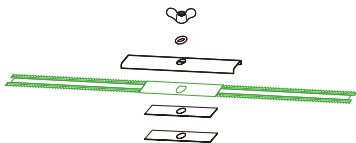

STEP 4

Screw the wing nut to secure the blade. When using X-blades, be sure to stack two "X" staggered as shown below.

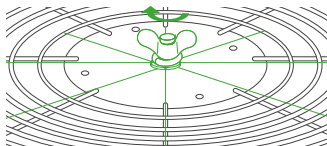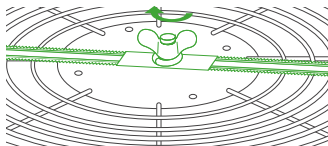


OPERATION

TRIMMING


STEP 1

Choose a flat, stable surface and place the anti-slip pad under the container.

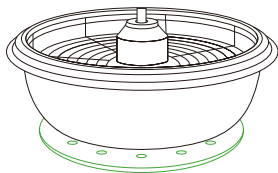

STEP 2

Put buds or leaves you want to trim on the mesh screen. If necessary, use the shears to cut the branches or buds to fit.

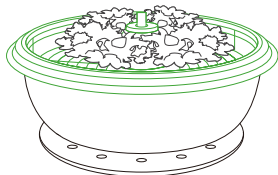

OPERATION

TRIMMING

STEP 3


Close the dome. Make sure the rotation axis of the sweeping curtains and the axis on the screen are properly connected.



STEP 4

Insert the handle into the slot on the top of the dome. Rotate the handle **clockwise**. The sweeping curtains will roll the buds or leaves and the blade under the screen will rotate and trim them.

Note: Rotate the handle in the same direction. Open the dome and adjust the sweeping curtains if they are stuck. If the blade rubs against the screen, adjust the blade according to the instructions on page 6-7.

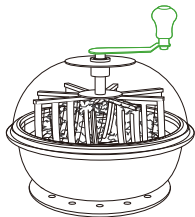


INSTALLATION

STEP 5

Stop rotating when finished. Open the dome and collect the trimmed buds or leaves on the screen.

Be careful and wear appropriate gloves when collecting.

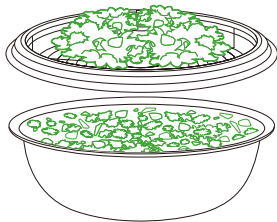

STEP 6

Use the included U-shaped scissors for fine trimming as needed.




MAINTENANCE

CLEANING

It is recommended to clean the main components of this product after trimming or on a regular basis.


STEP 1

Remove the blade following the instructions on page 6. Use a damp cloth to clean and wipe off any sticky residue from the blade, sweeping curtains, screens, dome and container.

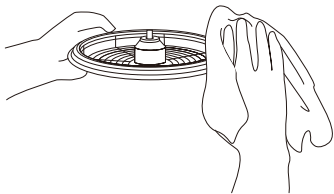

STEP 2

Install the blade back to the screen following the instructions on page 7. Keep the cleaned blade and other parts dry before the next trimming.

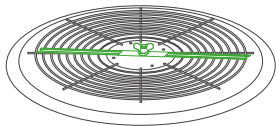

Designed by **VIVOSUN** in California.
Made in China