
YIVOSUN

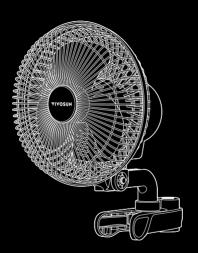

AeroWave Clip-On Fan (A6) USER MANUAL

@ VIVOSLIN 2023

Loye what

Welcome to YIVOSUN

Thank you for choosing VIVOSUN. We are committed to product quality and friendly customer service. If you have any questions or suggestions, please don't hesitate to contact us.

CONTENTS

Safety Information	1
Key Features	2
Product Contents	3
Specifications	5
Installation	6
Application for Growers	10
Maintenance	11
Warranty Information	12

SAFETY INFORMATION



Please read the following information carefully before installing and using. Failure to observe these safety instructions may result in serious injury and will release VIVOSUN of all liability and void all product warranties.

- The input voltage of this fan is 110Vac-120Vac/60Hz. DO NOT use the fan under higher input voltages.
- DO NOT use in the environment of high concentrations of particles such as active carbon, ferrous powders, etc. The environment temperature shall not exceed 45°C.
- DO NOT block the fan by force or change the angle when it is oscillating.
- DO NOT unplug the power cord directly when it is operating.
- Fix the fan securely on an appropriate position on a pole or post before it turned on.
- Check the fan regularly. Adjust or remove any obstructions affecting the fan when oscillating.
- Direct spraying or cleaning by water or other liquid is forbidden. This may cause short circuit
 or electric shock. DO NOT use chemicals like gasoline, benzene and diluent to clean the fan.
- Avoiding air reflux via open air flue or other fired equipment.
- DO NOT put fingers or other things into fans. Keep the product away from children.
- DO NOT let water into motor or electric parts.
- DO NOT cut off or reconnect the power cord. If the power cord is damaged, please contact
 us. Any unauthorized modifications or disassembly will void the warranty immediately.
- DO NOT use the product if it is damaged when received, please contact us for replacement.

KEY FEATURES

AUTOMATICAL OSCILLATION


Automatical oscillation with 80° horizontal moving angles and 120° vertical adjustable angles create powerful and uniformal air circulation.


2-LEVEL SPEED CHANGE

2 speed levels adjustable for different applications.

HIGH AIR FLOW

6-inch fan with high air flow blow strong air with a long distance.

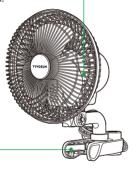

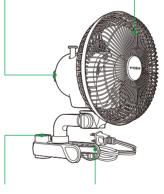

PATENTED CLIP-ON DESIGN

Patented Clip-on design makes the fan easy to install, adjust and securely fixed.

 
WIDE ADAPTABILITY

Suitable for different size of poles from ϕ 16-22mm with unique clip design.


ENERGY SAVING

High efficient with maximum 20W power consumption.

PRODUCT CONTENTS




6-inch Fan Unit x 1pc

 

Clip x 1pc

PRODUCT CONTENTS

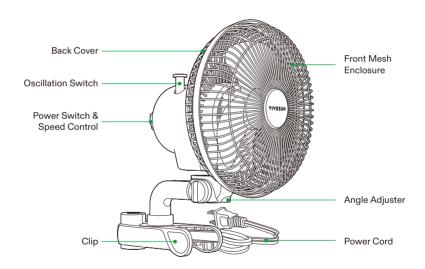

SPECIFICATIONS

Model	CFW-01
Fan Size	6-inch
Voltage	110Vac-120Vac
Frequency	60Hz
Power	20W
Oscillating Angle	80°(Horizontal, Automatical) 120°(Vertical, Manual)
Clamping Range	φ16-22mm
Speed Levels	2 Levels
Power Cord	NEMA 1-15P, 2.5m
Certificate	CE, RoHS, IP20
Weight	1.9 lbs.

STEP 1

Rotate and remove the knob on the slot of the Clip.

STEP 2

Slide the Fan Unit into the slot.






STEP 3

Replace the knob by screwing back to the slot.




STEP 4

Clamp the fan onto a pole or post at an appropriate level.

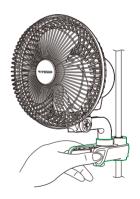


STEP 5

Adjust the vertical angle manually (unscrew the knob if needed). Tighten the knob to fix the vertical angle.

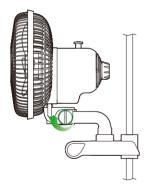

STEP 6

Plug the power cord of the fan into a nearby AC power outlet.

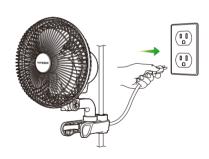

STEP 7


Turn on the fan by rotate the switch from OFF to Level 1. Rotate to Level 2 for higher wind speed. Pull up the toggle switch to turn on the oscillation. Push down to turn off the oscillation.

Note: Adjust the clip if the fan hit any obstructions during the oscillating.




STEP 8

Manage the power cord to keep the fan oscillating smoothly without dragging the fan when operating.

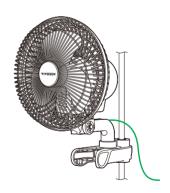

APPLICATION FOR GROWERS

- Clamp the Fan on an appropriate level and adjust the vertical angle that the fan can blow the whole canopy of plants with uniformal wind.
- Adjust the height of the fan when your plants grow higher.
- Choose the right speed level for your plants.
- For big tent (like 4ftx4ft), it is suggested to use 2 or more Clip-on Fans.

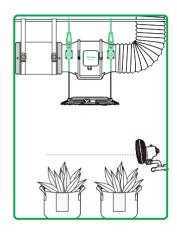


MAINTENANCE

CLEANING

Press the front cover of the fan unit and release the 4 buckles in turn. Remove the front cover and clean the fan blades with a damp cloth carefully. After cleaning, replace the front cover and lock the buckles.

Note: Turn off the fan and unplug the power cord before starting to clean. DO NOT spray the water on the fan or immerse any part of the fan into the water.

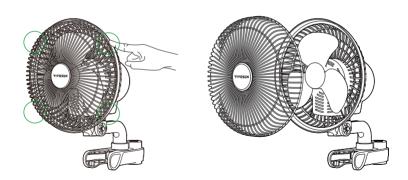

WARRANTY INFORMATION

WARRANTY TERMS

- We offer a 1-year warranty against manufacturing defects for all of our products from the date of purchase. If you need warranty assistance, please contact us as soon as possible.
- The warranty does not cover damage due to high moisture levels, water damage, power surges, improper hanging/mounting, improper use, dust build-up, or users' unauthorized modifications.
- 3. In the USA, if any AeroZesh duct fan ceases working within 30 days of use, you can choose:
 - (A) Exchange: We will email you a pre-paid return label. Please ship the light back to our USA warranty center and a replacement will be sent to you free of charge as soon as we receive the defective product.
 - (B) Refund: We will email you a pre-paid return label. Please ship the product to our USA warranty center and we will issue a refund as soon as the light has been received. Refund periods may depend on the processing time of your bank or institution—usually, a refund takes about 5 business days to be processed.
- Our company reserves all rights to the final explanation of this warranty structure. If you have any questions about our warranty policy, please contact us.

Designed by **YIYOSUN** in California.

Made in PRC